



Showering


solutions

Shower Trays

Premier Shower Deck	8 - 12
Universal Shower Tray	14 - 19
Easy-Fit Shower Tray	20 - 23
Trimline Shower Tray	24 - 26
Phlexi-Mat Shower Mat	27
Flush-Fit Shower Tray	28 - 31
Floor Line Shower Tray	32 - 35

Shower Doors

Window Spanning Kit	36
Shower Doors	36 - 65
Sliding Doors	48 - 49
Fixed Panels	58 - 59

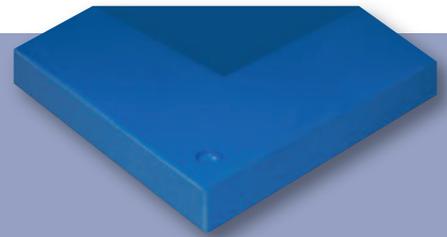

Premier

Shower Deck

The Premier Shower Deck is the perfect solution for a total level access wet floor showering area. It is self supporting and made of 50% recycled materials.

The Premier Shower Deck floor former can be installed in an existing concrete or timber floor, it has been designed with the waste outlet located to avoid joists in most circumstances and is self supporting. Premier Shower Decks are compatible with our FreeSpace, Finesse, Freedom, Enhance and Pro-door shower enclosures.



Once installed the Premier Shower Deck can either be tiled directly or covered with vinyl. The pre-cut outlet is suitable for gravity waste or the Phlexiflow pumped waste system, the gully used in both situations has a clamping ring to hold the vinyl sheeting in position within the waste outlet.

This durable base forms an area for a vinyl or tiled covering and is made from 50% recycled material. It can be trimmed by up to 60mm on each edge making installation easier. The slim line design is only 22mm deep and it has built in falls to create a gradient for swift removal of waste water.

The Premier Shower Deck provides a very cost effective answer for level access showering. Available in several sizes and compatible with our Pro-door screens and enclosures or with just a shower curtain. The Premier Shower Deck provides the perfect solution for your wet room requirements. A pre-cut linear drainage version is also available.



Features and Benefits:

- Strong and durable base made from 50% recycled material
- 22mm profile
- Can be tiled directly on to or covered in vinyl
- Built in gradients for water removal to the waste, minimum 2%
- Ideal for total level access
- Waste offset to avoid joists in most circumstances
- Pre-cut waste outlet suitable for gravity waste or Phlexiflow pumped waste systems
- Self supporting, no requirement for additional support underneath
- Can be trimmed by up to 60mm on each edge
- Accepts over 470kg of point at 1 metre centres loading
- Manufactured in high strength precision metal moulds

The Premier Shower Deck's 22mm profile allows easy installation into either timber or concrete shower areas.



Level Access



Offset Waste



Cut to Length



100% Recyclable




Recycled Content



Lifetime
Warranty


Installation

Timber

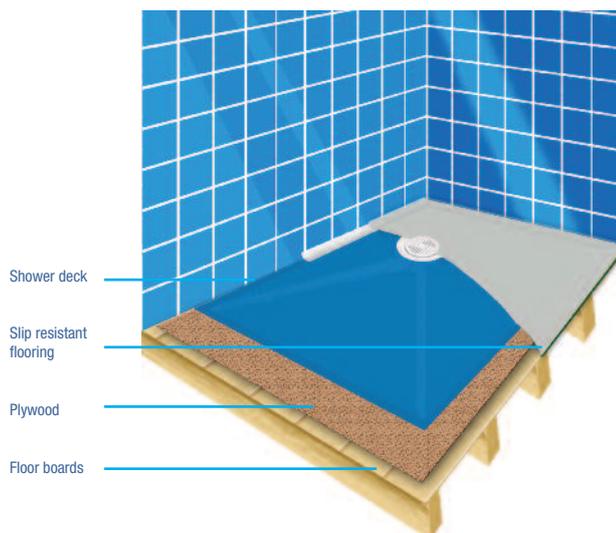

The Premier Shower Deck can be installed into an existing timber floor by removing the floorboards and fixing the former directly onto the joists. If the deck protrudes more than 100mm over a joist, support noggins should be installed. The floor should be brought level with the former to make the room level and ready for a suitable floor covering.

Concrete

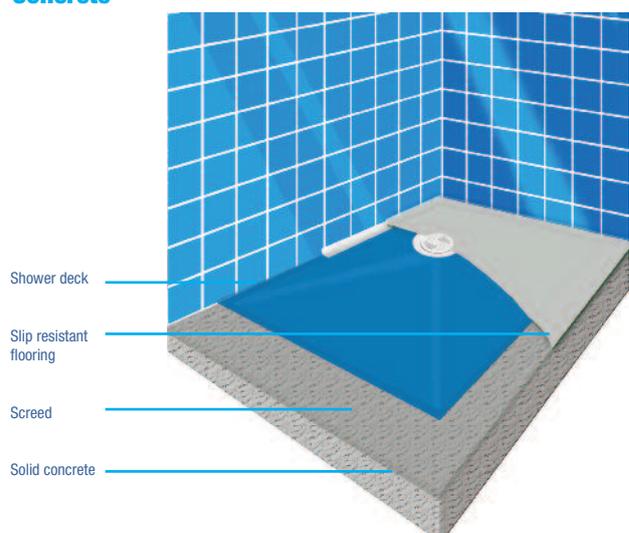

The Premier Shower Deck can be installed into an existing concrete floor by removing the screed and setting the floor former in a position to leave it level with the remainder of the shower room floor. When all pipework is complete the whole shower room floor, including the new shower area can be covered with suitable vinyl flooring or tiled.

Premier Shower Deck


900x900

Available Shower Doors

A C D I R R F S U V

Waste position Code

Off Set **P6821934**

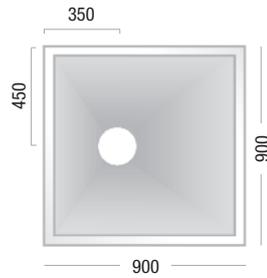

Premier Shower Deck


1000x1000

Available Shower Doors

**A C D I L R R F
S T U V**

Waste position Code

Off Set **P6821930**

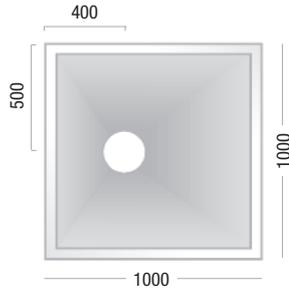

Premier Shower Deck


1200x1200

Available Shower Doors

**A B C D I L R R F
S T U V**

Waste position Code

Off Set **P6821936**

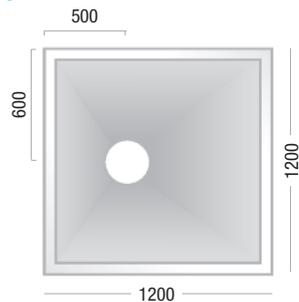

Premier Shower Deck


1135x770

Available Shower Doors

**A B E F G H J K N O
P Q R R F S U V W**

Waste position Code

Off Set **P6821931**

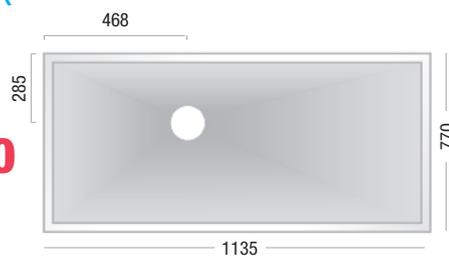

Premier Shower Deck


1300x800

Available Shower Doors

**A B E F G H J K N O
P Q R R F S T U W**

Waste position Code

Off Set **P6821932**

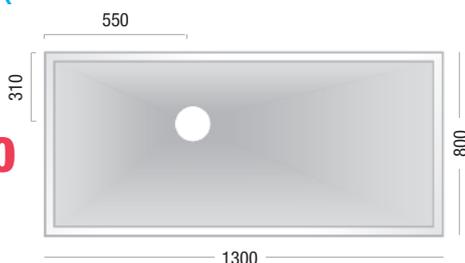


Premier Shower Deck

1400x900

Available Shower Doors

**B E F G H J K M N
O P Q R R F S T U W**

Waste position Code
Off Set **P6821935**

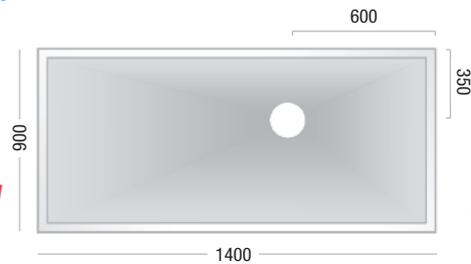



Premier Shower Deck

1450x1150

Available Shower Doors

M R R F

Waste position Code
Off Set **P6821929**

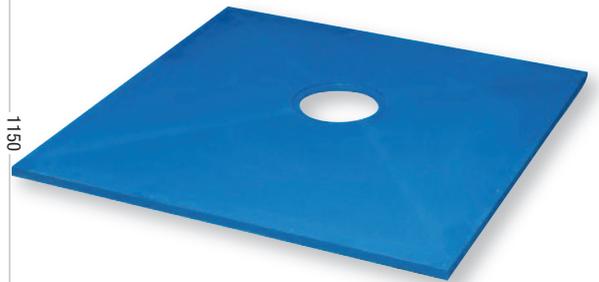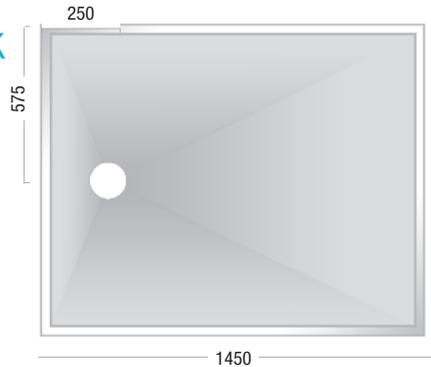


Premier Shower Deck

1500x800

Available Shower Doors

**B E F G H J K M N
O P Q R R F S T U**

Waste position Code
Off Set **P6821933**

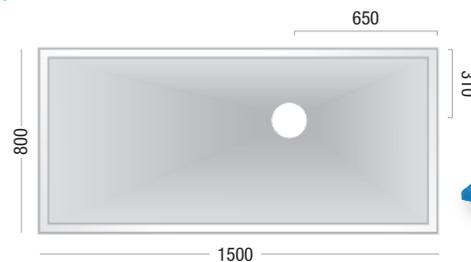




Premier Shower Deck

1800x800


Available Shower Doors

H M R R F S T

Waste position Code
Off Set **P6821940**

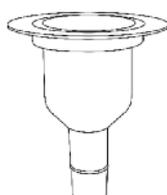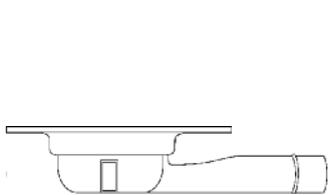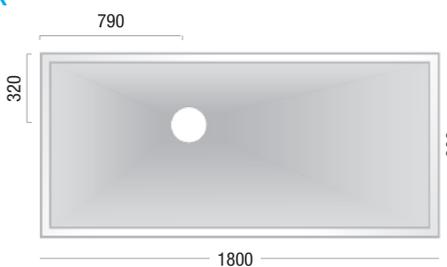

Suitable for gravity waste systems.
See pages 74 - 77


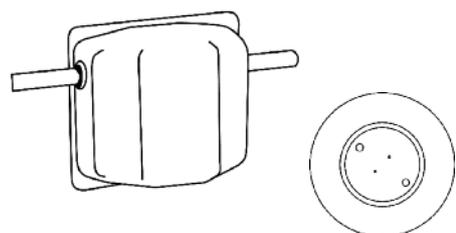


Suitable for all wet floor pumped waste
systems. See pages 78 - 83

Premier Linear Shower Deck

1200x900


Waste position Code
Centre Back **P6821988**

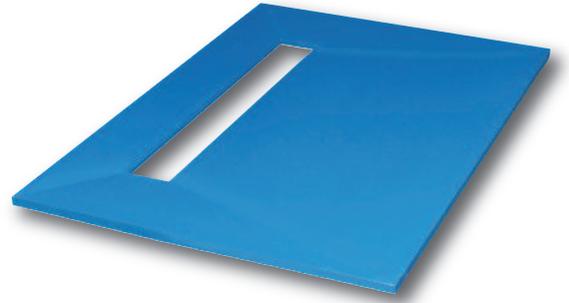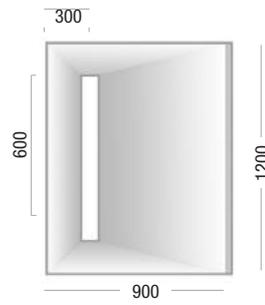

Premier Linear Shower Deck

1200x1200


Waste position Code
Centre Back **P6821987**

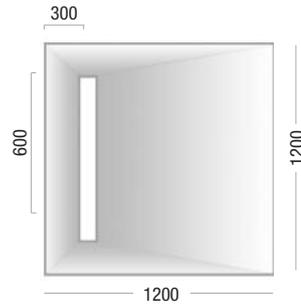

Premier Linear Shower Deck

1400x900




Waste position Code
Centre **P6821985**

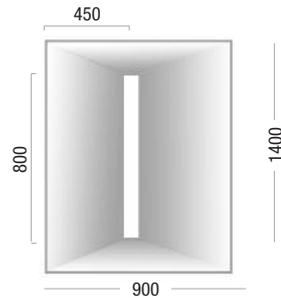

Premier Linear Shower Deck

1600x900

Waste position Code
Centre **P6821986**

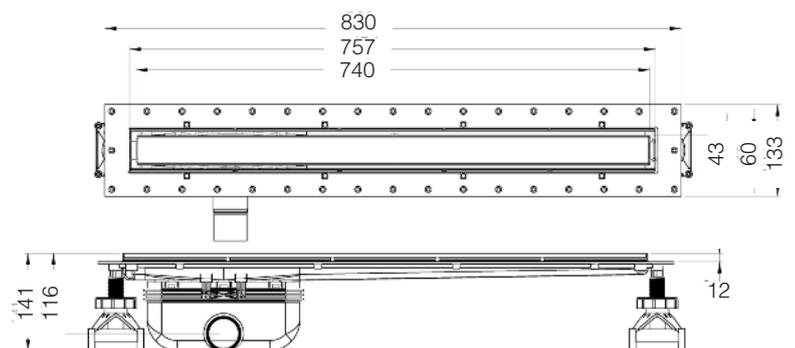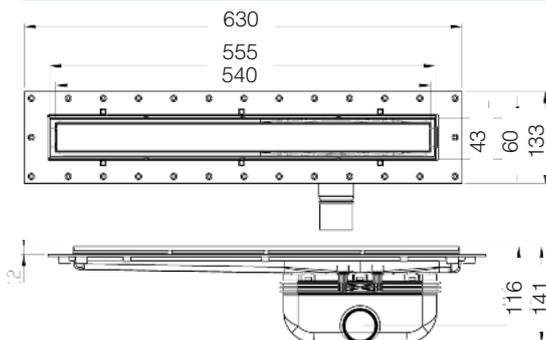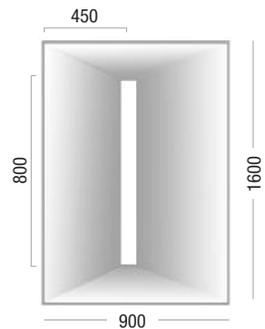

See Phlexiline Living drainage on pages 119 - 121